
INSTALLATION INSTRUCTIONS MMB0604B



COMPONENT LIST

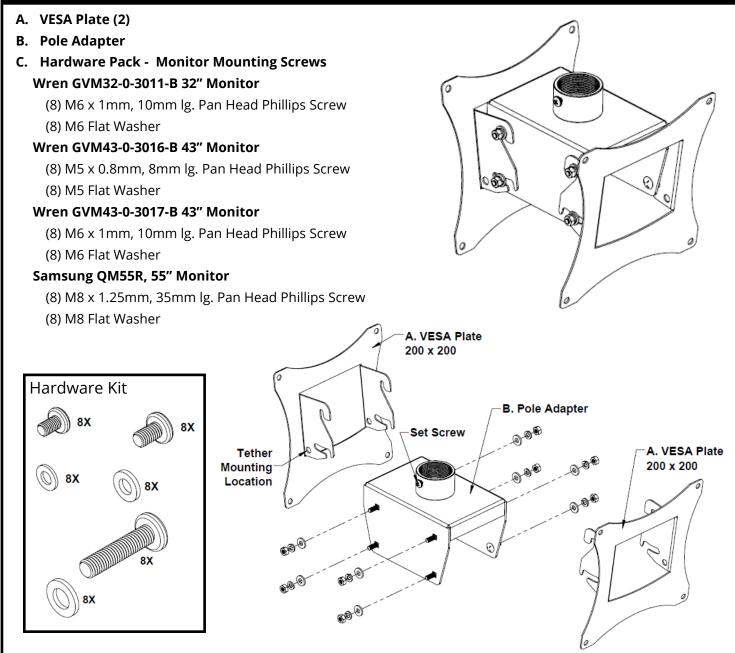

INSTALLATION STEPS

- 1. Install VESA Plate to back of monitor.
- 2. Thread Pole Adapter to CM-XL-xx Pole or 1.5" threaded pipe.
- 3. Tighten set screw on pole adapter.
- 4. Hook each VESA plate with monitor to studs on either side of the Pole Adapter.
- 5. Loosely install washers and nuts.
- 6. Adjust desired monitor tilt.
- 7. Tighten nuts.
- 8. IMPORTANT: Attach Safety Tether (included with CM-XL-xx Pole)